



Adjustment of the 2&3 Wire Dip Switch on RGLX Models Models: ARU12RGLX; ARU/AUU 18, 24, 30, 36, 42, 48 RGLX

RGLX indoor models can be configured, during installation, for 2 or 3 wire type remote control connections. Factory setting, down, is set for 2 wire type remote controls. Changing the dip switch into the upward position will allow for "3 wire" type remote control connection. The switch is located on the main control board on both, ARU/RGLX and AUU/RGLX models. Locations of the boards are depicted below. Incorrect pairing of the dip switch setting and remote controller type (2 or 3 wire) can result in the following errors: **CO:12, 12, 12.1**



The location of the control board for all ARU**RGLX models is shown above. The location of the control board for all AUU**RGLX models is shown below.





Available Wired Remotes	
UTY-RSRY	Simple remote (2 wire)
UTY-RNRUZ2	Touch Remote (2 wire)
UTY-RVNUM	Wired Remote (3 wire)

Disclaimer: