


Installation of Disconnect (Safety) Switch

The disconnect switch found on the installation manual diagram is a recommendation based on the National Electrical Code and should be installed if the local code mandates. The parts shown below can be purchased through your distributor or your local electrical supply store. When a disconnect switch is not required by local electrical code, you do not need to install a disconnect switch.

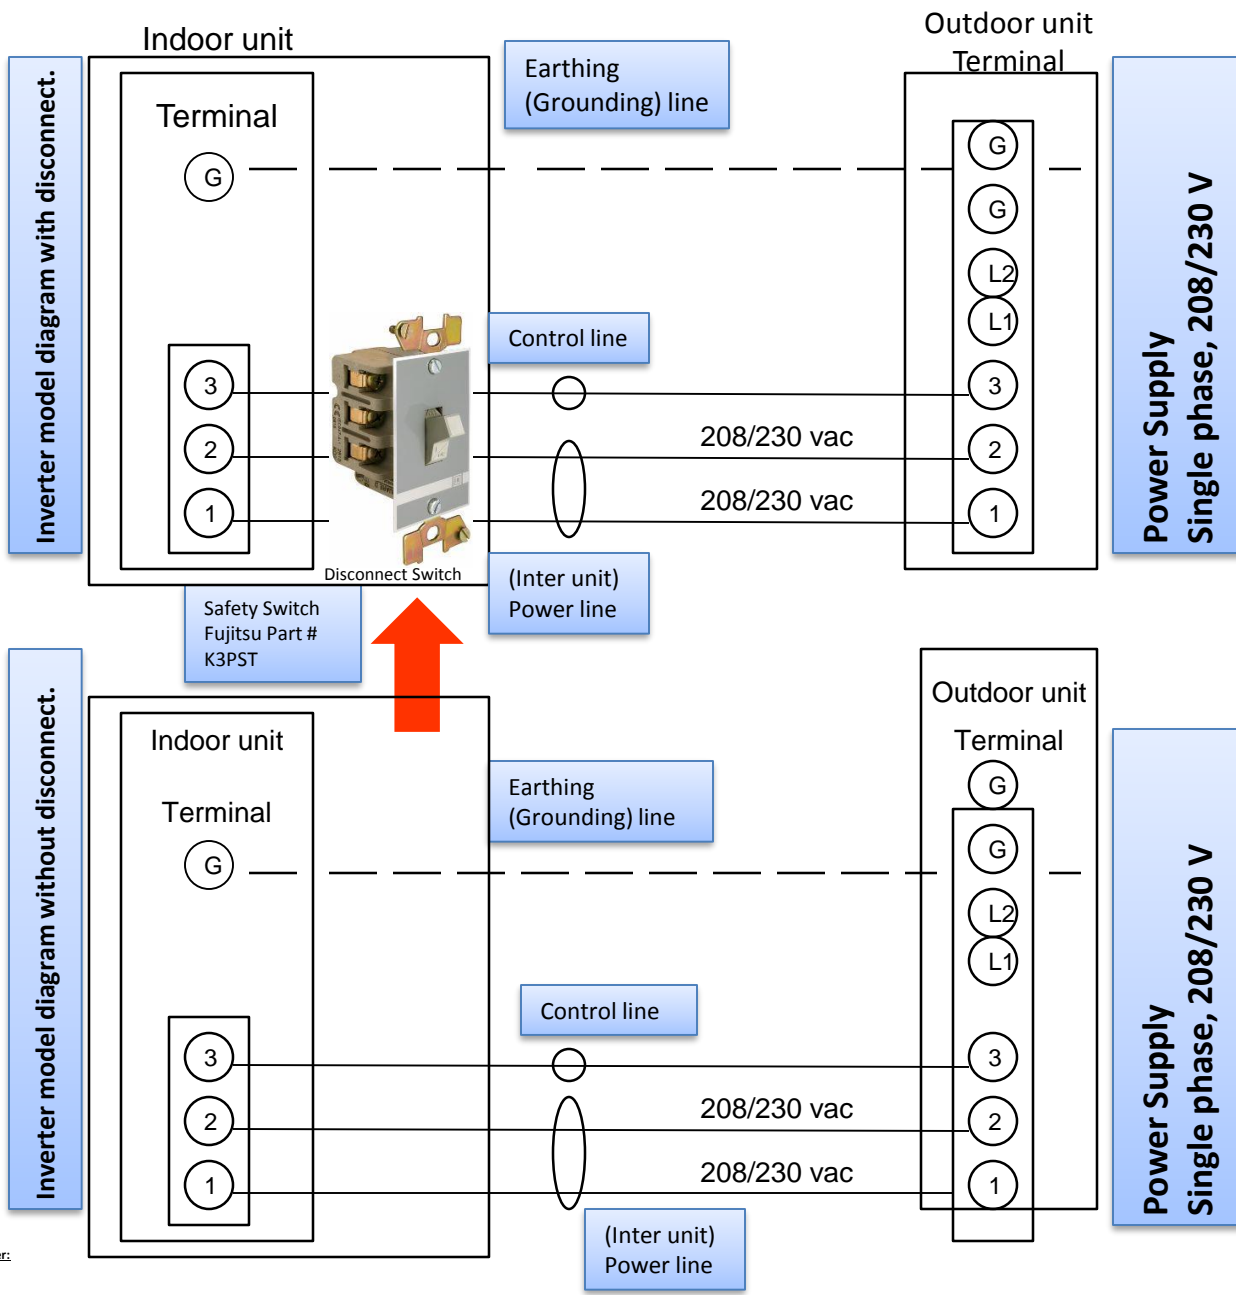

Disclaimer:

In order to perform some of these tests an electrical and/or refrigerant license is required. We strongly advise to check the Service manual for more detailed explanation. If you are not sure about these recommendations please contact us at 866-952-8324. # 059