

Setting up Lead/Lag Functions for Server Room

Model ASU30RLE

Tech needs to Field modify(place a Jumper between JM9 circled in **Red**) or Get modified boards from Fujitsu.

Once modified boards are installed, connect both indoors using terminal for wired remotes & set dip switch circled in **Blue** to 3 wire.



1. Units wired together, turn power on to both systems.
2. Tech needs to set Function 96, the Server Room function(01 for Primary, 02 for Secondary). **Should hear single Beep**
3. Turn power off on Primary and Secondary systems for 5 minutes.
4. Must reapply power in this order, Secondary then Primary.
5. Set clock to current time and operating condition of Cool/76F/Hi fan on Primary system. **(Should hear single Beep)**
6. Set Primary weekly timer from OFF to ON(**See Operation Manual**) to alternate operation between Primary and Secondary. **(Should hear single Beep)**
7. Press the manual button on Primary system for 3 seconds or more, Primary starts operating. **(Should hear single Beep)**