



## UTZ-VXAA - Fresh Air Intake

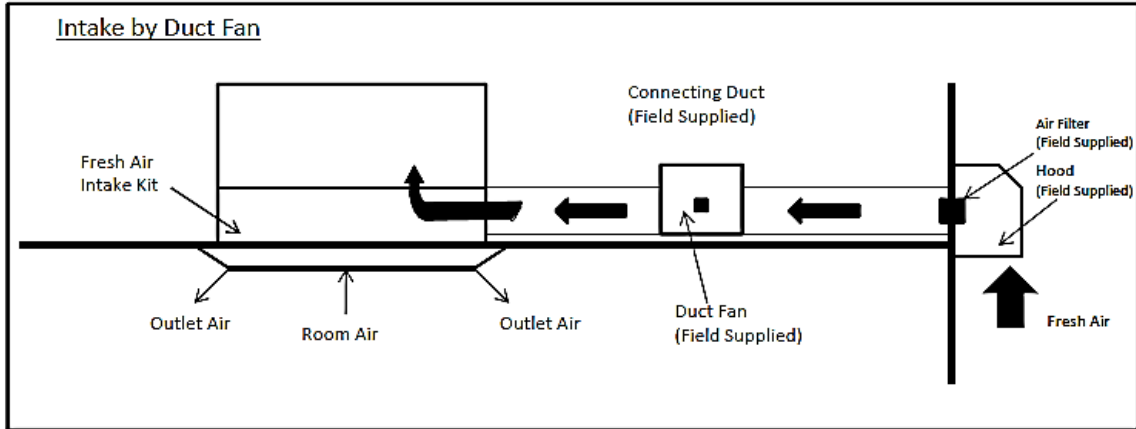

**Applicable on models:**

- AUU7RLF
- AUU9RLF
- AUU12RLF
- AUU18RLF

- Select Duct Fan**
1. Determine Fresh Air CFM
  2. Find Kit Static Pressure req'd from graph and table.
  3. Add hood loss
  4. Add filter loss
  5. Add duct loss
  6. Select fan using Fresh Air CFM and total static pressure loss, in. w.c.

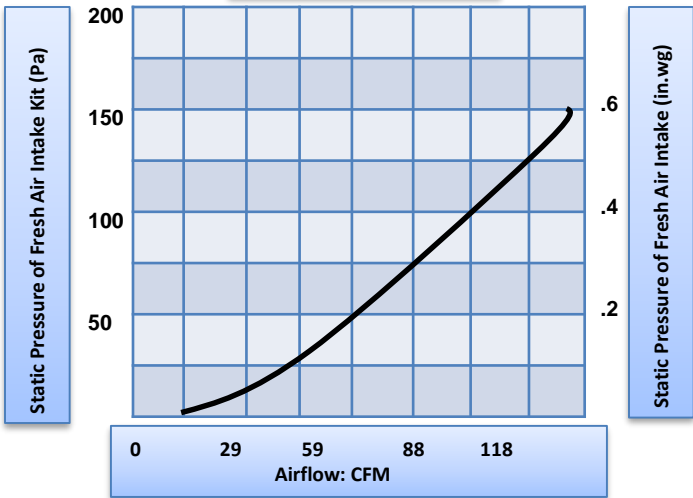

Model	Unit CFM	Fresh Air	Static Pressure
AUU9RLF	318	32	0.08
AUU12RLF	359	36	0.09
AUU18RLF	471	47	0.15

1. **Unit CFM** is maximum CFM
2. **Fresh Air** is maximum CFM Fresh Air per unit.
3. **Static Pressure** is Fresh Air external fan pressure (in. w.c.) required at Fresh Air Intake Kit inlet.

*Maximum Fresh Air is 10% of Maximum Unit CFM*