

## Third Party Condensate Pump Installation

### Applies to models:

ASU30CLX, ASU36CLX, ASU30CLX1, ASU36CLX1, ASU24CL1, ABU18RULX, ABU24RULX, ABU36RSLX, ASU30RLX, ASU18CL, ASU24CL, ASU9RL2, ASU12RL2, ASU9R2, ASU12R2.

### 1. Specifications required for third party pump

- Condensate pump rated for 115 VAC for non inverter modes, 208/230 VAC for inverter models.
- Condensate pump rated for .15 amps (150mA) maximum.

### 2. Instructions for installing third party pump

- Power source to the pump can be connected at the terminals 1 and 2 of the indoor unit.
- Connection for the safety switch from the pump should be connected at terminal 3 of the indoor unit.
- When making the safety switch connection on terminal 3 make the wiring from the pump as short as possible. This is necessary in order to reduce the likeliness of an error occurring from the communication circuit of the unit.

### 3. Troubleshooting

- Whenever troubleshooting a system with a condensate pump incorporated in the circuit, you should eliminate the pump connection before continuing to troubleshoot.
- We do not take responsibly for third party pumps as we can not guarantee the quality of the product.

Diagram for the inverter models.

