


Wireless Remote Control Custom Codes

Applicable models:

ASU30(36)CLX, ASU24CL, ASU24RL, ASU24RLQ

Remote control commands can be customized to work on a specific unit. To set up the remote control custom code, always set up the same code on both indoor unit PCB (hardware) and remote control PCB (software). (i.e. when the indoor unit PCB is changed to Code B, it can not receive the signal unless the remote control PCB is also changed to Code B).

	Indoor Unit	
	JM8 (JP)	JM10 (JP)
Code A (Default)	Closed	Closed
Code B	Open	Closed
Code C	Closed	Open
Code D	Open	Open

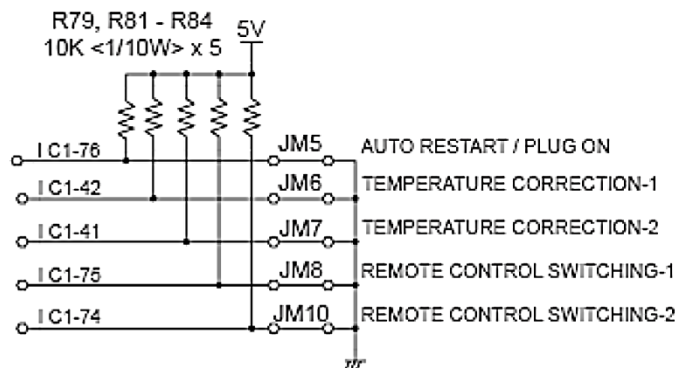


Wireless Remote Control Custom Codes

Applicable models:

ASU9(12)RMLQ, ASU9(12)RQ, ASU18RL, ASU9(12)RLQ, ASU15(18)RLQ, ASU9(12)CQ, ASU18CL


Remote control commands can be customized to work on a specific unit. To set up the remote control custom code, always set up the same code on both indoor unit PCB (hardware) and remote control PCB (software). (i.e. when the indoor unit PCB is changed to Code B, it can not receive the signal unless the remote control PCB is also changed to Code B).

	Indoor Unit	
	JM2 (JP)	JM3 (JP)
Code A (Default)	Closed	Closed
Code B	Open	Closed
Code C	Closed	Open
Code D	Open	Open

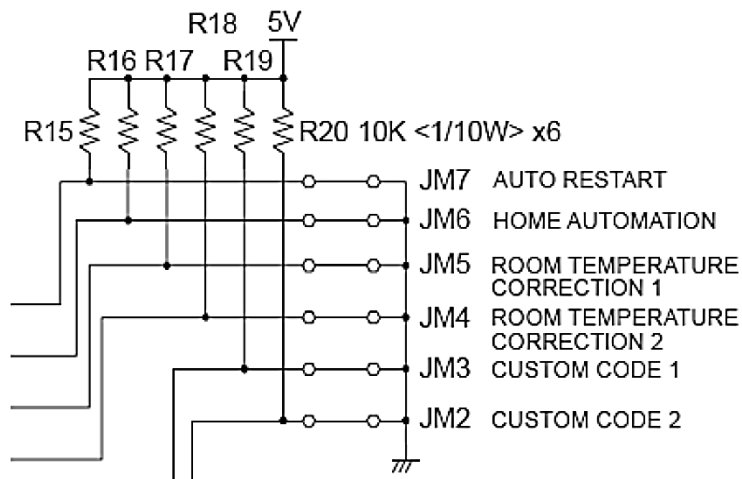

Wireless Remote Control Custom Codes


Set up the Remote Control

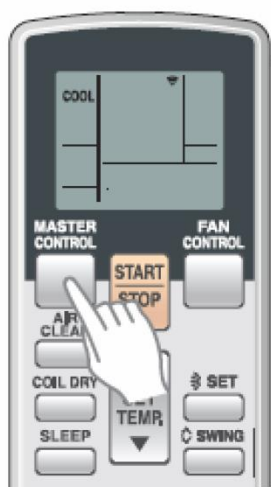

Press the MASTER CONTROL button for 5 seconds or more until a, b, c, or d displays.



Press the SET TEMP button to select the desired code. (a,b,c,d)

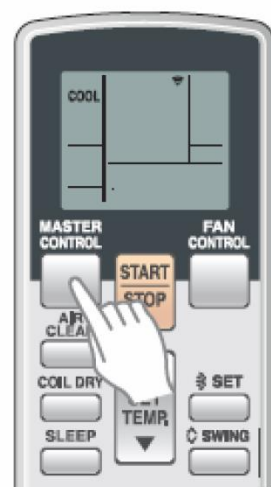


Press the MASTER CONTROL button to exit the programming mode.

Wireless Remote Control Custom Codes

Quick Hard Set up of the Remote Control

ASU9(12)RMLQ, ASU9(12)RQ, ASU18RL, ASU9(12)RLQ, ASU15(18)RLQ, ASU9(12)CQ, ASU18CL

B Code Only

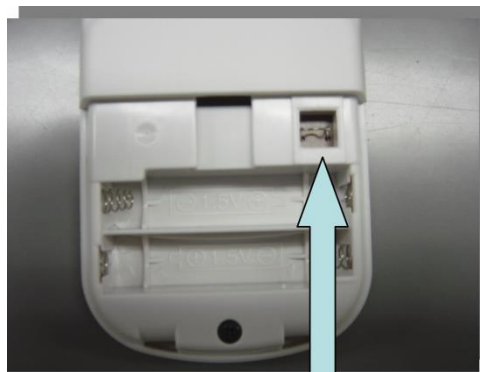

Cut jumper wire

Do not cut this jumper if you are going to use other codes such as a, c, or d.