

## Louver Motor Testing




To complete this test shut off main power , Unplug stepper motor from board and place your meter in **Ohms Ω**. Place Your **Black (-)** lead on the **Red** wire and your **Red (+)** lead to each wire and you should read the same values on all wires.

### **Ohms Ω Readings**

(All Fujitsu Stepper Motors)

**225-325 Ohms Ω**

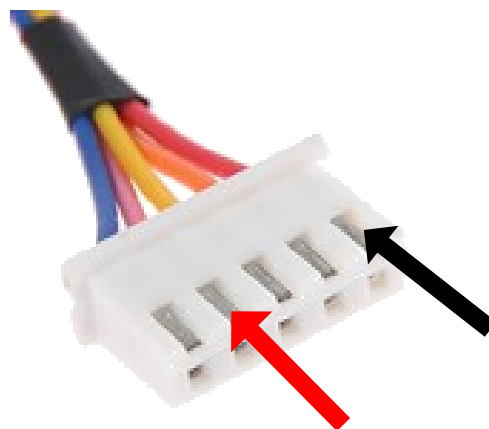

If you read open or shorted on any of the wires or out of the range listed, replace the stepper motor.