


Setting up the Thermo Sensor on the UTY-RNNUM

- 1) With the wired remote off, press both the Set Temp Up & Down buttons along with the Fan Control button simultaneously for 5 seconds or more to enter the function setting mode.
- 2) The remote should display **00:00** on the timer.
- 3) Press the right Set Time buttons to select the function number. The function numbers will be **00:42** and **00:48**. You will need to set them one at a time.
- 4) Press the Set Temperature Up and Down, to select the setting value of **'01'**.
- 5) Press the Timer Set button to lock in the settings. The **'01'** will flash.
- 6) Cut power for the system for one minute than restore power back to the system. You can set both functions, **00:42** and **00:48** than shut off power.
- 7) Once power is restored you can activate the thermo sensor. Press and hold the Thermo Sensor button to activate the thermo sensor.

*See attached Engineering Bulletin 'How to Enter Function Settings'.

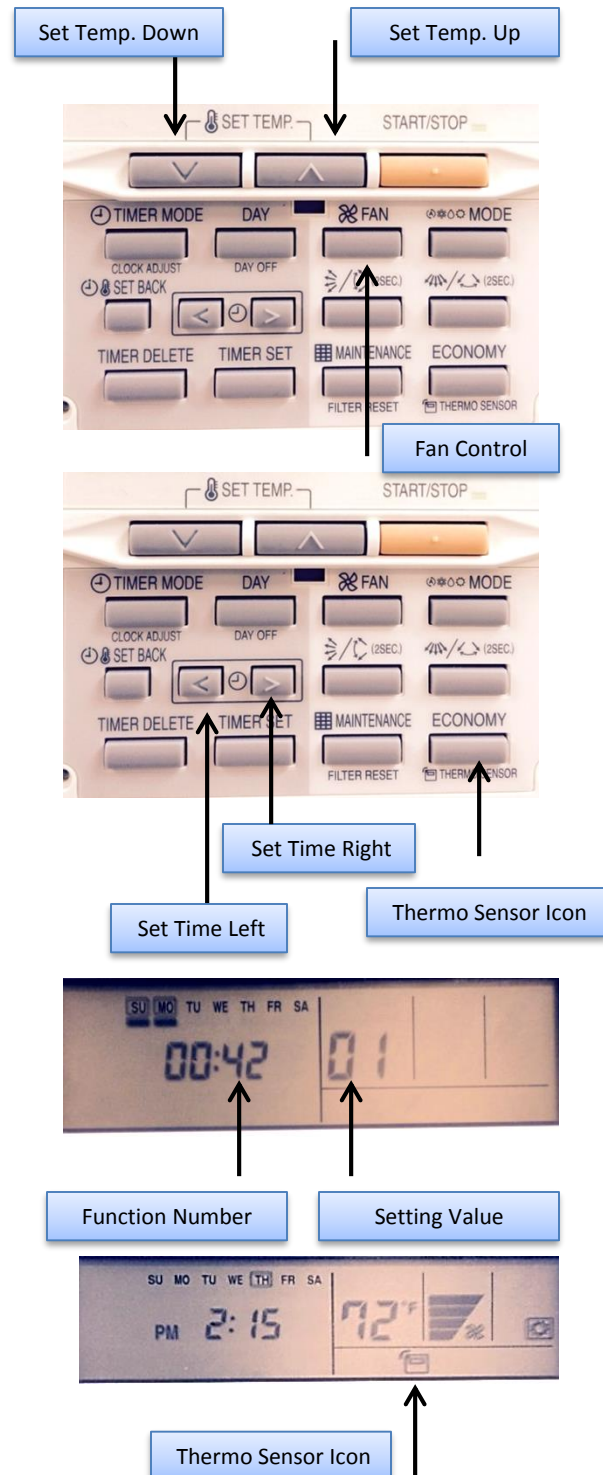

Entering Function Settings

UTY-LNHUM / UTY-LRHUM

Entering the Function Setting Mode:

Press the Fan (Control) button, Set Temp.(**^**) and the Reset button simultaneously then release the Reset button to enter the function setting mode.

Selecting the Function Number and Setting Value

1. Press the Mode button first then press the Set Temp. (**^**)(**v**) buttons to select the function number. (Press the Mode button to switch between the left and right digits.)
2. Press the Fan button to proceed to setting the value. (Press the Fan button again to return to the function number selection.)
3. Press the Set Temp. (**^**)(**v**) buttons to select the setting. (Press the Mode button to switch between the left and right digits.)
4. Press the Timer Mode button and Start/Stop button, in the order listed to confirm the settings.
5. Press the Reset button to cancel the function setting mode.
6. After completing the Function Setting, be sure to turn off power to the outdoor disconnect for a minimum of one minute and turn it on again.



AR-REC1U / AR-RED1U / AR-REG1U

Entering the Function Setting Mode:

Press the Powerful button, Set Temp.(**^**) and Reset button simultaneously then release the Reset button to enter the function setting mode.

Selecting the Function Number and Setting Value

1. Press the Set Temp. (**^**)(**v**) buttons to select the function number. (Press the Min. Heat button to switch between the left and right digits.)
2. Press the Powerful button to proceed to setting the value. (Press the Powerful button again to return to the function number selection.)
3. Press the Set Temp. (**^**)(**v**) buttons to select the setting. (Press the Min. Heat button to switch between the left and right digits.)
4. Press the Mode button and then the Start/Stop button, in the order listed to confirm the settings.
5. Press the Reset button to cancel the function setting mode.
6. After completing the Function Setting, be sure to turn off power to the outdoor disconnect for a minimum of one minute and turn it on again.



UTY-RVNUM

Entering the Function Setting Mode:

1. Make sure the indoor unit is powered down and not running otherwise you will be restricted from entering the Function Settings menu.
2. From the monitor screen, press the Menu button twice.
3. Once at the submenu, press and hold the Screen Left and Screen Right buttons for 5 seconds.
4. Select the Function Setting option from the list. From there you will be in the Function Settings Menu and free to select function number and setting values.
5. After completing the Function Setting, be sure to turn off power to the outdoor disconnect for a minimum of one minute and turn it on again.



UTY-RNBYU / UTY-RNNUM

Entering the Function Setting Mode:

1. Press the Set Temp. (**^**)(**v**) buttons and Fan button simultaneously for more than 5 seconds to enter the function setting mode.
2. Press the Set Back button to select the indoor unit number.
3. Press the Set Time buttons to select the function number.
4. Press the Set Temp. buttons (**^**)(**v**) to select the setting value. The display flashes as shown to the right during setting value selection.
5. Press the Timer Set button to confirm the setting. Press the Set button for a few seconds until the setting value stops flashing. If the setting value display changes or if “- -” is displayed when the flashing stops, the setting value has not been set correctly. (An invalid setting value may have been selected for the indoor unit.)
6. Repeat steps 2 to 5 to perform additional settings. Press the Set Temp. buttons (**^**)(**v**) and Fan button simultaneously again for more than 5 seconds to cancel the function setting mode. In addition, the function setting mode will be automatically canceled after 1 minute if no operation is performed.
7. After completing the Function Setting, be sure to turn off power to the outdoor disconnect for a minimum of one minute and turn it on again.



UTY-RSNUM

Entering the Function Setting Mode:

1. Press both the Temp. Up and Down buttons (**^**)(**v**) and FAN together for more than 5 seconds simultaneously. Then, shift to Function Setting Mode.
2. Press the Temp. Up or Temp. Down button (**^**)(**v**) and select the indoor unit number. Then, press the Fan button.

Function Number & Setting Number Setting

3. “Function Number” display blinks. Then, display Number by pressing the Temp. Up or Temp. Down button.
4. When the “Setting Number” blinks, press the Fan button to set the Setting number by pressing the Temp. Up or Temp. Down button (**^**)(**v**).
5. Fix the setting by pressing the power button. (Data is transferred to the indoor unit).
6. After completing the Function Setting, be sure to turn off power to the outdoor disconnect for a minimum of one minute and turn it on again.

