

Third Party Condensate Pump Installation 48RLXFZ(1) HFI Models

When wiring pumps into our new systems, we recommend using the external input feature on the indoor board instead of breaking the #3 communication wire. On the majority of the new systems, the boards have an input/output terminal for connecting a condensate pump. The connection that needs to be used is the input terminal for 'forced stop'. Forced stop will shut the system off in the event the pump fills up and the contacts on the pump open. Each unit is different, see list below that shows which system forced stop can be used and what will be needed to make it work.

Please note, that the ASU9RLS2, ASU12RLS2, ASU18CL, ABU18RULX, ABU24RULX, ABU36RSLX, AUU18, 24, 36, and 42RCLX do not have input/output on the board.

| Indoor Model # | Wiring Kit Needed | Interface Kit Needed |
|--|-------------------|----------------------|
| ASU7RLF, ASU9RLF, ASU12RLF | UTY-XWZX | UTY-XCBXZ1 |
| ASU7RLF1, ASU9RLF1, ASU12RLF1 | UTY-XWZXZ5 | UTY-XCBXZ2 |
| ASU18RLF, ASU24RLF | UTY-XWZX | None |
| AUU9RLF, AUU12RLF, AUU18RLF | UTY-XWZX | None |
| ARU9RLF, ARU12RLF, ARU18RLF, ARU24RLF | UTY-XWZX | None |
| ASU9RLS2, ASU12RLS2, ASU15RLS2 | UTY-XWZXZ5 | UTY-TWBXF1 |
| AGU9RLF, AGU12RLF, AGU15RLF | UTY-XWZXZ5 | None |

Please note the wire length on the external input can not exceed 33 feet.
The voltage on the external input can not exceed 24VDC and 10mA.