



Service Tips

Compressor Stop Control Software Feature

Some Fujitsu condensers have a software feature which will prevent them from running in cooling outside of it's operating range. When the detected value of the outdoor unit ambient temperature sensor is lower than temperature in the table below, the compressor operation is stopped.

	System	Cooling(°F)
	9R2	-
	9CQ	-
	9RQ	-
	9RLQ	-
	9RL	-
	9RLS	-
	9RLS2	-
9	9RLS2H	-
9	9RLS3	-
	9RLS3H	-
	9RL2	-
	9RLFC	-
	9RLFW	-
	9RLFW1	-
	9RLFF	-
	9RLFFH	-
	12R2	-
	12CQ	-
	12RQ	-
	12RLQ	-
	12RL	-
	12RLS	-
	12RLS2	-
12	12RLS2H	-
	12RLS3	-
	12RLS3H	-
	12RLFC	-
	12RLFW	-
	12RLFW1	-
	12RL2	-
	12RLFF	-
	12RLFFH	-

	System	Cooling(°F)
	15RLQ	Cooming(1)
15		-
	15RLS2	-
	15RLS	-
	15RLS2H	-
	15RLS3	-
	15RLS3H	-
	15RLFF	-
	15RLFFH	-
	18CL	-
	18RL	-
	18RLB	5
	18RLQ	-
	18RLX	-
18	18RLXS	-
	18RLXFW	5
	18RLFC	5
	18RLXFZ	-
	18RLXFZH	-
	24CL	5
	24RL	5
	24RLB	5
	24RLQ	5
	24RLX	-
	24RLXQ	-13
24	24RLXS	-13
	24RLXFW	-13
	24CL1	5
	24RML	-
	24RML1	-
	24RLXFZ	-
	24RLXFZH	-

	System	Cooling(°F)
30	30CLX	5
	30CLX1	-13
	30RLXB	-13
	30RLXQ	-13
	30RLX	-13
	36CLX	5
	36CLX1	-13
	36RLX	-
26	36RLXB	-13
36	36RML	-
	36RML1	-
	36RLXFZ	-
	36RLXFZ1	-
42	42RLX	-
48	48RLXFZ	-
	48RLXFZ1	-

Page 1 of 1