



Honeywell

For further assistance, please contact Honeywell directly for Tech Support

1-800-633-3991

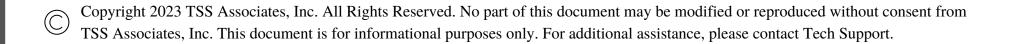

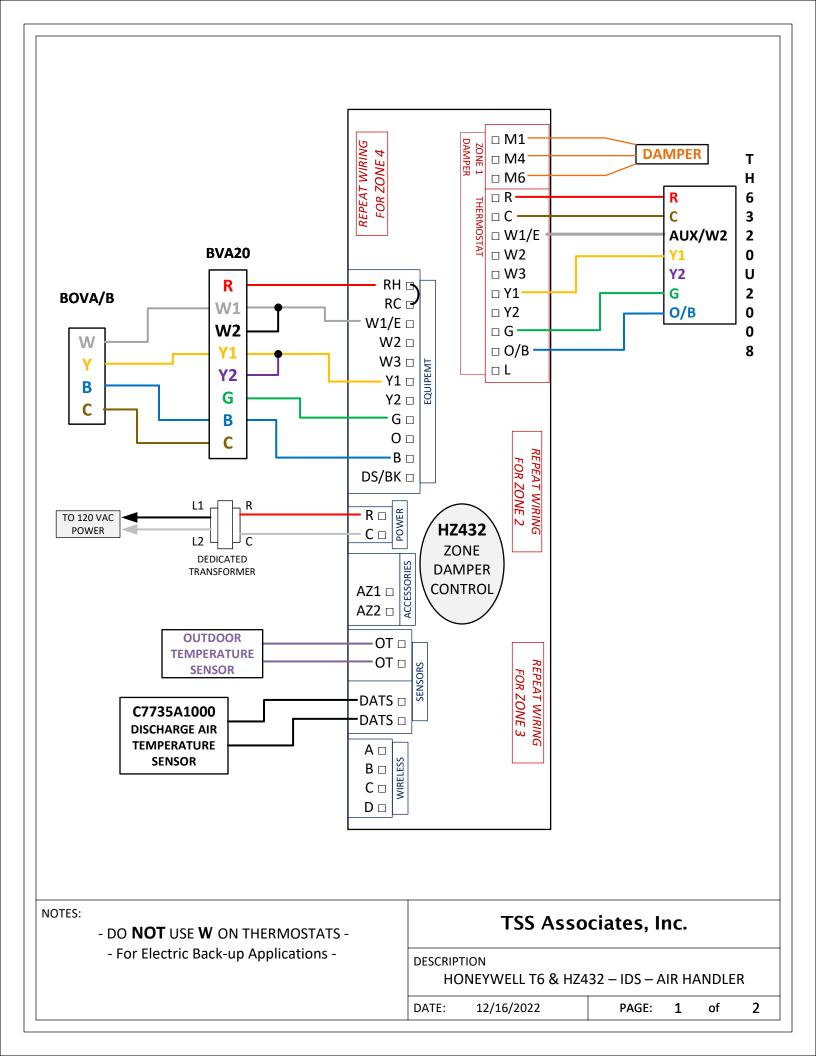

THERMOSTAT PARAMETERS:

130 - Outdoor Temp. - Set to **0**

200 - System Type - Set to 2 = Heat Pump
 205 - Equipment Type - Set to 7 = Air To Air
 218 - Reversing Valve - Set to 1 = O/B on Heat

 220 - Cool Stages
 - Set to 1

 221 - Aux/E Stages
 - Set to 1

253 - Aux/E Control - Set to 0 = Both
 255 - Aux Heat Type - Set to 1 = Electric
 260 - Fossil Fuel Kit - Set to 0 = Thermostat
 300 - System Changeover - Factory set to 0 = Manual

340 - Aux Heat Droop - Set to 5°F

350 - Upstage Timer - Factory set to **0 = Off**

365 - Cool 1 CPH - Compressor cycle rate, Set to **1 CPH** (Cycles Per Hour)

375 - Aux Heat CPH- Set to 1 CPH387 - Compressor- Set to Off

Protection

425 - Adaptive Recovery - Set to **On**

ZONE CONTROL PARAMETERS:

SYSTEM TYPE: [HEATPUMP]
DUAL FUEL OPER: [NO]
COMPRESSOR STAGES: [1]
AUX HT OPER: [YES]

AUX HT OPER: [YES]
AUX HT STAGES: [1]

RF ENABLED: [NO] **THIS OPTION IS ONLY USED IF YOU ARE INSTALLING WIRELESS CONTROLLERS**

ZONES INSTALLED: SELECT APPROPRIATE NUMBER OF ZONES BEING USED

ZONE1 TSTAT TYPE: [HTPUMP-B] → REPEAT THIS SELECTION FOR EACH ZONE

STAGE 2 CONTROL: [TIMER] STAGE 3 CONTROL: [OFF]

ADVANCED CONFIG? [YES] → HEAT FAN CONTROL: [HVAC]

STAGE 2 TIMER: [60]

DISCHARGE SENSOR: **[YES]** DAT HIGH LIMIT: **[145]**

OT SENSOR: [YES]

OT BALANCE TEMP: [0]

SAVE CHANGES? [YES]

NOTES:

Some of the thermostat parameters may not come up during initial set-up. Once at 'home' screen, press and hold 'Menu' button for 5 seconds and go into 'Device Settings' to configure remaining parameters.

TSS Associates, Inc.

DESCRIPTION

HONEYWELL T6 & HZ432 – IDS – AIR HANDLER

DATE: 12/16/2022 PAGE: 2 of 2

^{**}All other setpoints should be left to Factory Settings unless any optional equipment has been added to system or based upon customer preference**