 



## Honeywell

For further assistance, please contact Honeywell directly for Tech Support

1-800-633-3991



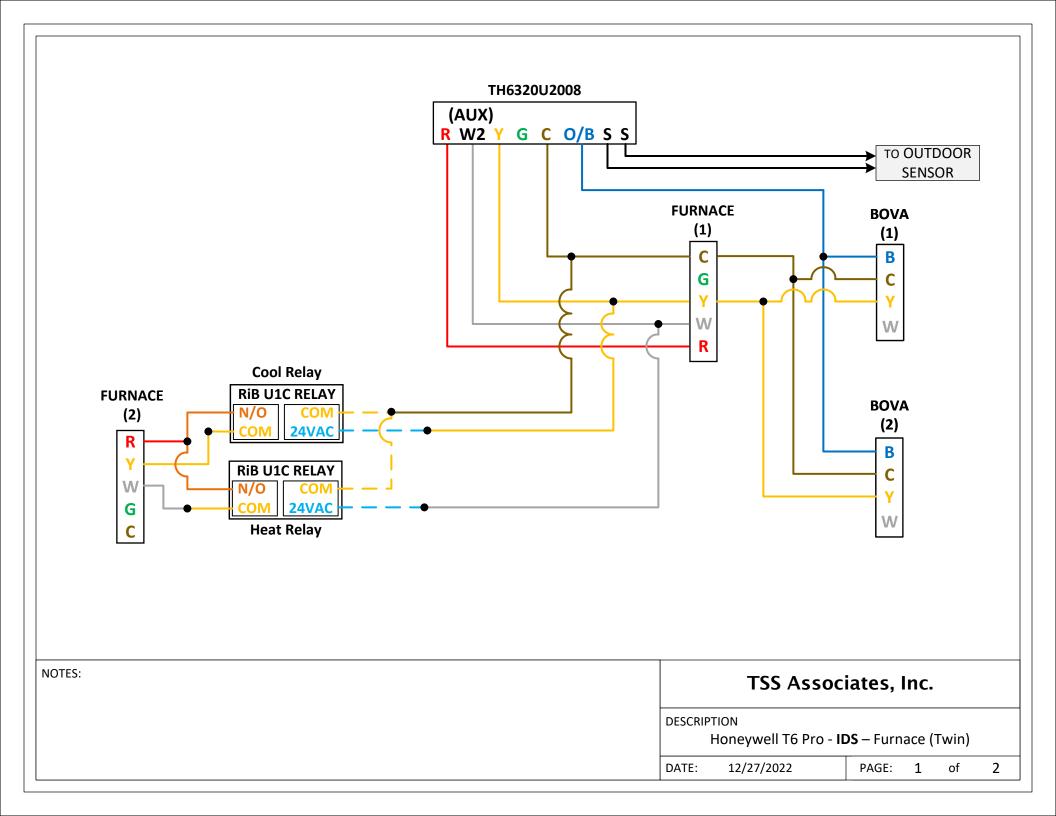

## THERMOSTAT PARAMETERS:

130 - Outdoor Temp. - Set to 1 = Wired Outdoor Sensor

200 - System Type - Set to 2 = Heat Pump
205 - Equipment Type - Set to 7 = Air To Air
218 - Reversing Valve - Set to 1 = O/B on Heat

220 - Cool Stages - Set to 1 221 - Aux/E Stages - Set to 1

253 - Aux/E Control - Set to 0 = Both
 255 - Aux Heat Type - Set to 2 = Gas/Oil
 260 - Fossil Fuel Kit - Set to 0 = Thermostat
 300 - System Changeover - Factory set to 0 = Manual

340 - Aux Heat Droop - Set to **5°F** 

350 - Upstage Timer - Set to 2 = 45 minutes

355 - Compressor Lockout/ - Set to 35°F

**Balance Point** 

365 - Cool 1 CPH - Compressor cycle rate, Set to **1 CPH** (Cycles Per Hour)

375 - Aux Heat CPH - Set to **1 CPH** 387 - Compressor - Set to **0 = Off** 

Protection

425 - Adaptive Recovery - Set to 1 = Yes

\*\*All other setpoints should be left to Factory Settings unless any optional equipment has been added to system or based upon customer preference\*\*

NOTES:

TSS Associates, Inc.

**DESCRIPTION** 

Honeywell T6 Pro - IDS - Furnace (Twin)

DATE: 12/27/2022

PAGE:

2

οf

2