

WARNING

INSTALLATION INSTRUCTIONS


Included in this KIT B:

K0700095047 Screw M4 L16-2pcs.

K0700095054 Screw M3 L14-1 pc.


K0000036795 Heat Sink Grease 1pc.

Step1

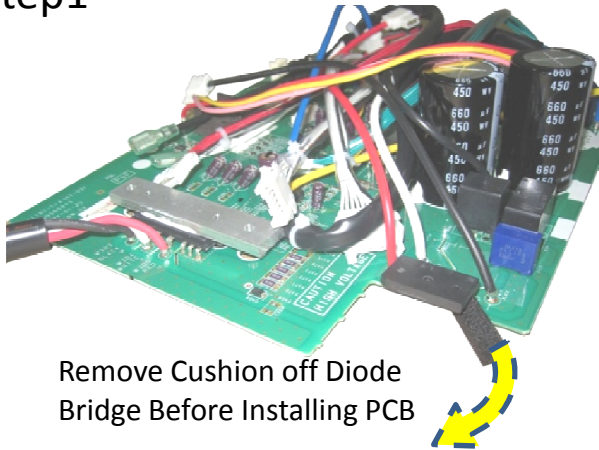

Remove Cushion off Diode Bridge Before Installing PCB

Step2

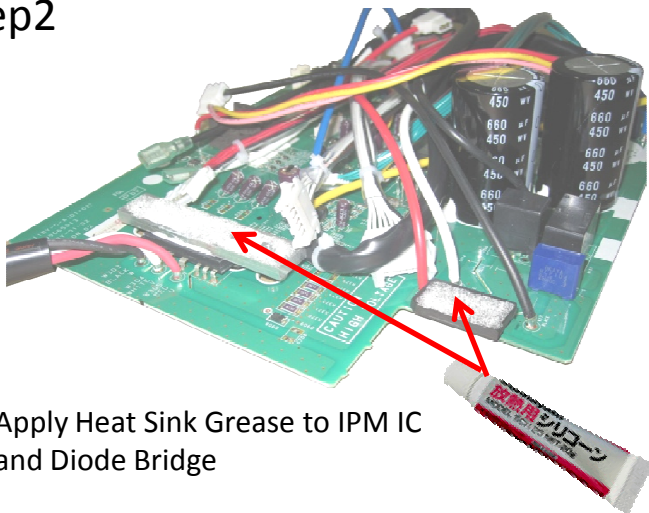

Apply Heat Sink Grease to IPM IC and Diode Bridge

Step3



Apply Heat Sink Grease to Heat Sink

Step4

Secure Diode Bridge and IPM IC with enclosed screws.

